


## LAB REPORT NO 5

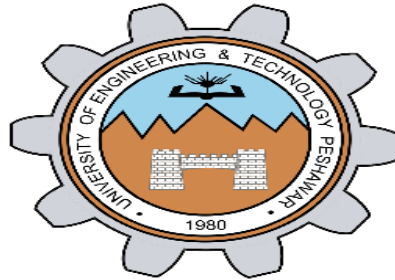

**Spring 2020**

### **CS-II lab**

Submitted by: **Muhammad Ali**

Registration No: **19PWCSE1801**

Class Section: A

Submitted to:

**Engr. Faiz ullah**

(December 30, 2020)

Department of Computer Systems Engineering  
University of Engineering and Technology, Peshawar

## Lab 5 Parallel R, L, C Circuits

### Objectives

This exercise examines the voltage and current relationships in parallel R, L, C networks. Of particular importance is the phase of the various components and how Kirchhoff's Current Law is extended for AC circuits. Both time domain and phasor plots of the currents are generated. A technique to measure current using a current sense resistor will also be explored.

### Theory Overview

Recall that for resistors, the voltage is always in phase with the current, for capacitors the voltage always lags the current by 90 degrees, and for inductors the voltage always leads the current by 90 degrees. Because each element has a unique phase response between +90 and -90 degrees, a parallel combination of R, L and C components will yield a complex impedance with a phase angle between +90 and -90 degrees. Due to the phase response, Kirchhoff's Current law must be computed using vector (phasor) sums rather than simply relying on the magnitudes. Indeed, all computations of this nature, such as a current divider, must be computed using vectors.

### Equipment

1. AC Function Generator
2. Oscilloscope
- 3.

### Components

1. 10 nF actual: \_\_\_\_\_
2. 10 mH actual: \_\_\_\_\_
3. 1 k $\Omega$  actual: \_\_\_\_\_
4. 10  $\Omega$  actual: \_\_\_\_\_
5. 15 nF actual: \_\_\_\_\_
6. 15 mH actual: \_\_\_\_\_
7. 10 k $\Omega$  actual: \_\_\_\_\_

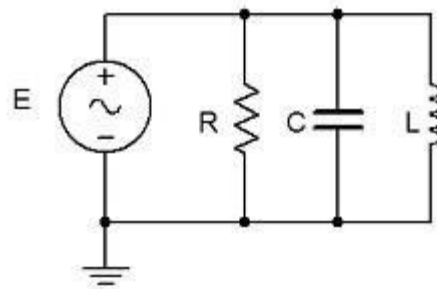


Figure 1

## Procedure

1. Using Figure 1 with a 10 V p-p 10 kHz source,  $R=1k\Omega$ ,  $C=10nF$  and  $L=10mH$ , determine the theoretical capacitive reactance, inductive reactance and circuit impedance, and record the results in Table 1 (the experimental portion of this table will be filled out in step 5). Using the current divider rule, compute the currents in resistor( $i_R$ ), inductor( $i_L$ ) and capacitor( $i_C$ ) and record them in Table 2.
2. Build the circuit of Figure 1 using  $R=1k\Omega$ ,  $L=10mH$  and  $C=10nF$ . A common method to measure current using the oscilloscope is to place a small current sense resistor in line with the current of interest. If the resistor is much smaller than the surrounding reactance it will have a minimal effect on the current. Because the voltage and current of the resistor are always in phase with each other, the relative phase of the current in question must be the same as that of the sensing resistor's voltage. Each of the three circuit currents will be measured separately and with respect to the source in order to determine relative phase.

To measure the total current, place a  $10\Omega$  resistor between ground and the bottom connection of the parallel components. Set the generator to a 10 V p-p sine wave at 10 kHz.

3. Place probe1 across the generator and probe2 across the sense resistor. Measure the voltage across the sense resistor; calculate the corresponding total current via Ohm's Law and record in Table 2. Along with the magnitude, be sure to record the time deviation between the sense waveform and the input signal (from which the phase may be determined eventually).
4. Remove the sense resistor and place one  $10\Omega$  resistor between the capacitor and ground to serve as the capacitor current sense. Place a second  $10\Omega$  resistor between the resistor and ground to sense the resistor current, and a third  $10\Omega$  resistor between the inductor and ground for the inductor current. Leave probe one at the generator and move probe two across the sense resistor in the resistor branch. Repeat the process to obtain its current, recording the magnitude and phase angle in Table 2. In a similar way move probe2 so that it is first across the capacitor's sense resistor and then across the inductor sense resistor. Measure and record the appropriate values in Table 2.
5. Compute the deviations between the theoretical and experimental values of Table 2 and record the results in the final columns of Table 2. Based on the experimental values, determine the experimental  $Z$ ,  $X_L$  and  $X_C$  values via Ohm's Law ( $X_C = V_C/I_C$ ,  $X_L = V_L/I_L$  and  $X_Z = V_{in}/i_{in}$ ) and record back in Table 1 along with the deviations.
6. Create a phasor plot showing  $i_{in}$ ,  $i_C$ ,  $i_L$  and  $i_R$ . Include both the time domain display and the phasor plot with the technical report.
7. Repeat the experiment for any values of  $C$ ,  $L$  and  $R$ .

## First experiment:-

### Data Tables:-

R=1k

C=10nF

L=10mH

	Theoretical	Experimental	%Deviation
$X_C$	1592.3	1666.6	4.6%
$X_L$	628	666.6	6.1%
$Z$	1389.1	1414.2	1.8%
$\theta$	89	89.9	10%

**Table 1**

	Theoretical	Experimental	%Deviation
$I_C$	6.5 mA	6 mA	7.6%
$I_L$	15.9 mA	15 mA	5.6%
$I_R$	10mA	10 mA	0%
$I_S$	7.1 mA	7.0 mA	1.4%

**Table 2**

## Second experiment:-

### Data Tables:-

R=10k

C=15nF

L=15mH

	Theoretical	Experimental	%Deviation
$X_c$	1061.57	1142.11	7.5%
$X_L$	942	1000	5.8%
$Z$	10000.7	10001.09	0.002%
$\theta$	89.9	89.9	0%

Table 1

	Theoretical	Experimental	%Deviation
$I_c$	9.4mA	8.75 mA	6.9%
$I_L$	10.6 mA	10 mA	5.6%
$I_R$	1 mA	1 mA	0%
$I_s$	0.997 mA	0.993 mA	0.4%

Table 2